

CARE AND MAINTENANCE cont.

- Ensure that zips are either fully open or fully closed or they may be damaged.
- Always use the rain cover in inclement weather.
- Do not place items on the hood/canopy, it may damage the vehicle and/or render it unsafe.
- Rubber tyres can leave marks on some surfaces. The tyres can react with some surfaces (vinyl floor coverings, carpets etc.) and cause stains. Always stand the stroller on a protective surface indoors.
- Routinely clean the metal parts with a damp cloth & then dry immediately.
- Fabrics should be cleaned using lukewarm water and a mild washing detergent. Do not wash in the washing machine.

WARRANTY

Babystyle UK Ltd provides a warranty in support of the retailer from whom you purchased this product. The warranty is effective for 6 months from the date of purchase for the original purchaser/owner. Proof of purchase will (at the discretion of Babystyle UK Ltd) be required in order for your retailer to claim on the warranty. The warranty excludes any fault caused by misuse, damage or neglect. It is the user's responsibility to undertake routine inspection and maintenance of the vehicle in order to avoid damage to the vehicle and/or injury to the child. The vehicle is returned to the retailer at the owners' expense in order to ascertain if a claim under the warranty is justified. Please carefully read the instructions on how to look after your stroller.


Babystyle UK Limited
36 Charles Street
Sileby
Leicestershire
LE12 7RJ
UNITED KINGDOM

www.babystyle.co.uk

This instruction manual © Babystyle UK Limited 2006
All rights reserved. EVO TS 1444/190406

EVO^{TS}

Instructions

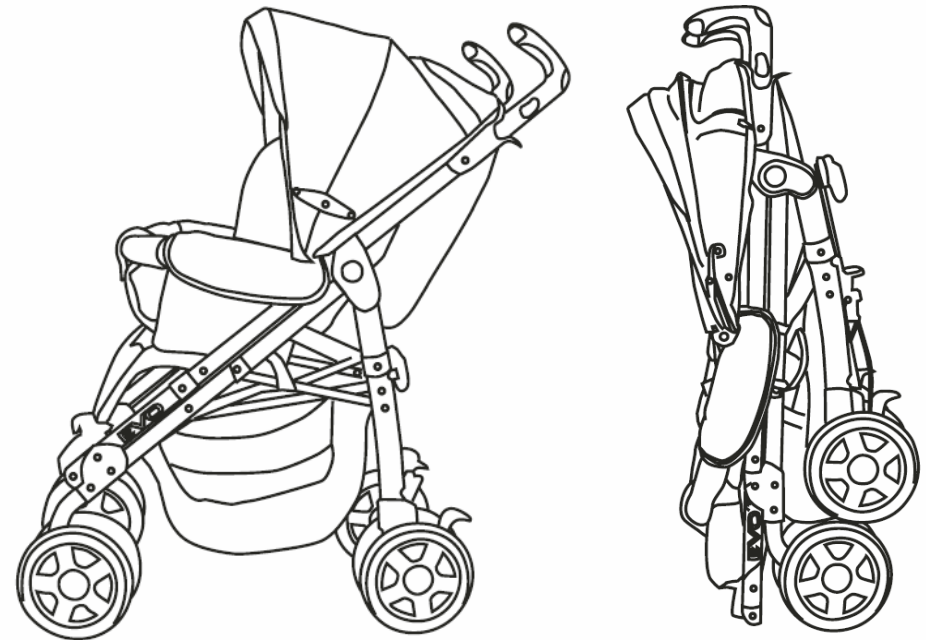

IMPORTANT – KEEP FOR FUTURE REFERENCE

Please read these instructions carefully before using your new Travel system / Pushchair. Keep this manual in a safe place for future reference.

CONTENTS

Important Safety Information	2
Primary features	4
Opening the pushchair	4
Folding the pushchair	4
Fitting the rear wheels	5
Fitting the front wheel	5
Operating the swivel wheels	5
Fitting the bumper bar	5
Adjusting the handle height	5
Adjusting the seat backrest	5
Adjusting the leg rest	6
Using the brake	6
Using the safety harness	6
Fitting/removing the hood	6
Fitting the apron	7
Fitting the car seat	7
Care and maintenance	7/ 8

FITTING THE APRON

To fit the apron first place the bottom part of the apron over the leg rest and thread the top part of the apron under and over the bumper bar, fasten the toggle on the front of the apron. Attach the two plastic hooks to the plastic bushes between the seat and the frame.

FITTING THE CAR SEAT

To fit the car seat to the EVO pushchair. Remove the hood from the armrest. Release the press-studs on the armrest fabric (on the outside part of the armrest only) and fold the armrest fabric in towards the seat. Re-fit the hood and pull the hood back to give better access to fitting the car seat. Hold the car seat above the armrests and lower it into position. The adaptors at the bottom of the car seat handle should locate in the corresponding holes in the pushchair armrests. When both adaptors on the car seat are located in the corresponding holes on the pushchair push the car seat down firmly until you hear the adaptors click into place. Check that the car seat is securely attached to the pushchair by pulling up on the car seat handle.

REMOVING THE CAR SEAT

To remove the car seat from the pushchair; holding the car seat handle in the upright position in one hand release the two red buttons nearest the pushchair armrests and lift the car seat clear of the pushchair.

CARE AND MAINTENANCE

- Regularly check screws, rivets, bolts & fastenings to ensure they are locked tight and secure. Replace any parts in an inferior condition. Should you intend to use the pushchair during the winter, by the sea or off-road; it is important to clean thoroughly & dry the vehicle after use. Salt from the ocean or from roads will corrode metal parts if not removed after use.
- Check on a regular basis that all chassis locking devices are working correctly.
- If any part of the pushchair is damaged contact your local Babystyle retailer immediately without using the pushchair.
- Do not expose your pushchair to excessive sunlight for extensive periods of time.
- Take care not to tear the fabrics while transporting the pushchair.
- Petroleum jelly is suitable to use as a lubricant for moving parts.

ADJUSTING THE LEG REST

The leg rest can be adjusted for comfort. To adjust the leg rest push-in simultaneously the buttons on either side of the leg rest and adjust the leg rest to the preferred position.

USING THE BRAKE

To engage the brake press down the brake lever between each set of rear wheels with your foot. Check that the brake is fully engaged on both sets of wheels. To release the brake, with your foot lift up the brake lever until the wheels move freely.

NEVER LEAVE THE PUSHCHAIR WITHOUT FIRST ENGAGING THE BRAKE.

USING THE SAFETY HARNESS

Always apply the parking brake before placing your child in the vehicle. The safety harness has two shoulder straps, two waist belts and a crotch strap. Place the two shoulder straps over the child's shoulders and the waist belts around the child's waist, the crotch strap should be placed between the child's legs, the waist belts & shoulder straps should be clipped into the buckle at the end of the crotch strap. The harness can be adjusted to suit your child by sliding the adjusters along the shoulder straps and waist belts. To release the safety harness, push the buttons on the centre buckle. D-rings for attaching a separate harness conforming to BS 6684 can be found attached to the integral harness at the base of the waist straps. **ALWAYS USE THE CROTCH STRAP IN COMBINATION WITH THE WAIST BELT.**

ALWAYS USE THE SAFETY HARNESS.

FITTING/REMOVING THE HOOD

To fit the hood push the hood bracket into the plastic housing at the rear of the armrest until it clicks. To remove the hood, depress the plastic button underneath the armrest fabric and pull the hood bracket upwards, repeat on the opposite side.

IMPORTANT SAFETY INFORMATION


1. **WARNING:** A child's safety is your responsibility
2. **WARNING:** Children should never be left unattended in this vehicle.
3. It is important that any person intending to use this vehicle fully understands the instructions.
4. **WARNING:** Children should be harnessed in this vehicle at all times. Use the five point harness that is provided or one that complies with BS 6684, make sure the harness is securely fastened to the "D-rings" situated on the integral harness either side of the seat. Adjust the harness to its correct position with the use of the adjustable straps.
5. **WARNING:** Children should always be kept clear of moving parts while making adjustments to the vehicle.
6. **Never** overload the vehicle; the weight limit for the shopping tray is **3 kg** always place articles in the centre of the tray provided. Any load attached to the handle will adversely affect the stability of the vehicle.
7. **WARNING:** Incorrect assembly, folding or use of this vehicle may cause damage and affect the safety of the vehicle.
8. It may be unsafe to use accessories (e.g. child seats, bag hooks rain covers etc.) other than those approved by the manufacturer.
9. **WARNING: Never leave the vehicle without first engaging the parking device. Avoid uphill or downhill parking.**
10. Avoid using the vehicle on steps, stairs or escalators as it may be dangerous to your child/children.
11. Check on a regular basis to make sure that all essential components & locking devices are functioning correctly.
12. When the pram body is used, the depth from the top of the mattress to the top of the side of the body (or at any position within 300mm of the harness attachment points), should not be reduced to less than 140mm when the mattress is in position. Any mattress purchased should conform to BS1877: part 10.
13. Do not use replacement parts other than those supplied by the manufacturer or distributor.
14. Never use this vehicle as a permanent bed for your child / children.

BS 7409: 1996 label

WARNING: A CHILDS SAFETY IS YOUR RESPONSIBILITY.

Children should be harnessed in at all times and should never be left unattended. The child should be clear of moving parts while making adjustments. This vehicle requires regular maintenance by the user. Overloading, incorrect folding and the use of non-approved accessories may damage or break this vehicle. Read the manufactures instructions.

PRIMARY FEATURES

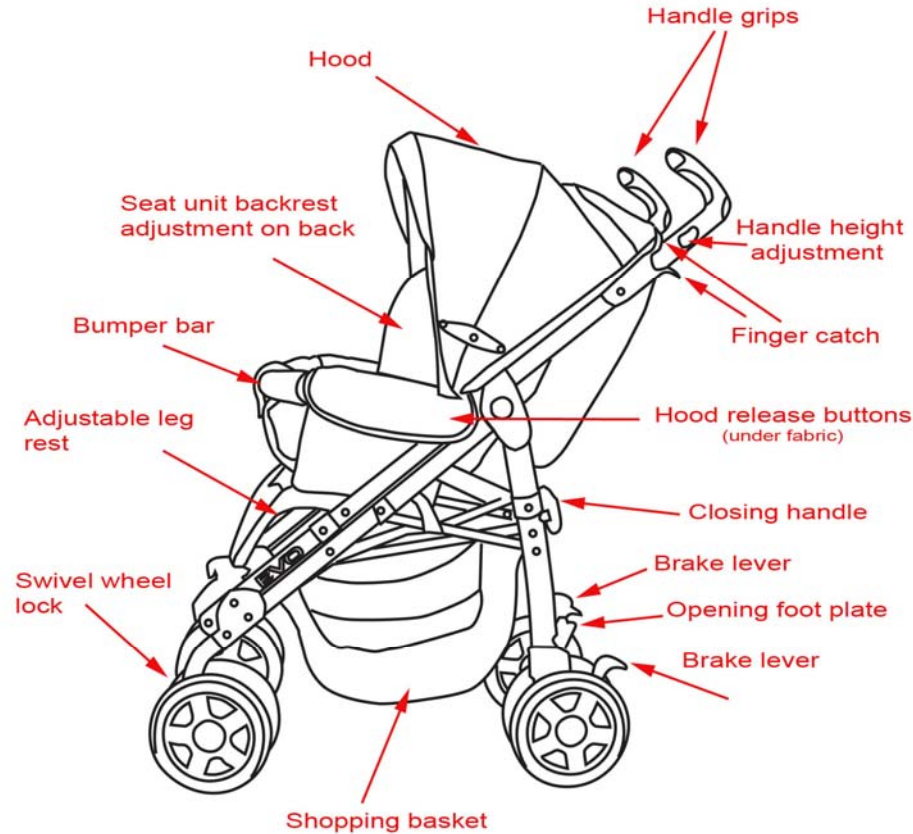

OPENING THE PUSHCHAIR

Remove any packing and place out of the reach of children. Pull up on both finger catches found just below the handle grips and lift the pushchair by the handle grips, the frame will start to open. Push down gently with your foot on the opening foot plate. And tilt the handle grips forwards. Push the seat down to ensure all safety locks are fully engaged.

FOLDING THE PUSHCHAIR

Apply the pushchair brake. Pull both finger catches and hold them in then push the handle grips downwards until the frame starts to fold. Release the finger catches and grip the closing handle at the back of the frame. Pull it upwards until the pushchair is fully folded.

FITTING THE REAR WHEELS

The rear wheels are connected to the linked brake bar which is in turn linked to the pushchair frame. Remove any packing & spread the brake link bar so that the two rear wheel units are located over the back legs of the pushchair. Push each rear wheel unit onto each rear leg of the pushchair until it clicks into position. Check the wheel units are secure by trying to pull them off.

FITTING THE FRONT WHEELS

Remove any packing & position the front wheel unit over the front leg of the pushchair. Push the wheel unit onto the pushchair leg until it clicks into position. Check the wheel units are secure by trying to pull them off.

OPERATING THE SWIVEL FRONT WHEELS

The front wheels can be used in swivel wheel or fixed wheel mode. The operating lever is situated between the two wheels of each front wheel unit. To switch between swivel or fixed wheel mode; push the lever down for swivel wheel mode, pull the lever up for fixed wheel mode.

FITTING/REMOVING THE BUMPER BAR

To fit the bumper bar push the end of the bumper bar into the end of the armrest until it clicks. Repeat the operation on the opposite side. To remove the bumper bar push up the button underneath the armrest and pull the bumper bar out of the armrest.

ADJUSTING THE HANDLE HEIGHT

The handle height is adjustable to two positions. To adjust the handle height press in the button on the handle grip shaft and slide up/down the handle. The handle will click into one of the pre-set positions.

ADJUSTING THE SEAT BACKREST

To adjust the seat backrest to one of its four positions; pull up the adjustment handle in the centre of the back of the seat backrest until the seat backrest moves freely. Reposition the seat backrest to one of the desired four positions and release the adjustment handle. **TIP:** If the seat backrest appears to rest at an angle, reposition the seat recline so that it is supported equally on both sides of the seat in a level position. To raise the seat backrest push the seat adjustment handle until the seat is in the preferred position.