



IMPORTANT, RETAIN FOR FUTURE REFERENCE:  
READ CAREFULLY

## **Maisie Cotbed Instructions for use**

### **Components & Fittings**

2 X Cot sides with teething rails (one cot side fitted with plastic drop-side fittings)

2 X Cot ends

1X Cotbed end

1 X Cot/Cotbed base

8 X Barrel fittings

8 X 60mm Screws

1 X Allen key

Unpack the cot bed and identify the component parts listed above. Do not discard any packaging until you have identified all the components and fittings.

### **To assemble the cotbed as a cot:**

Use the Allen key to attach the cot side (the side without the plastic fittings) to the cot large ends using 4 X 60mm screws and 4 X barrel fittings.

Fix the cotbed base to the cot ends, use 4 X 60mm screws and 4 X Barrel fittings to secure the base, all the screws should be located at the same height to ensure the base is level.

*You should always use the cot with the base in this lowest position as soon as your baby is old enough to sit unaided.*

Fit the remaining cot side by locating the plastic fittings on the bottom ends of the cot side with the plastic fittings in the lower parts of the cot ends. Slide the cot side onto these lower fittings by 1 cm, when the lower fittings are located correctly, line up the upper fittings on the cot side and the cot ends and slide the cot side down until it clicks into position. Check the cot side is secure in all four corners.

### **To operate the drop-side:**

With the drop side in the highest position (closed position) hold the top rail of the cot side in the centre and lift (the side will lift approximately 1cm), while holding-up the cot side; push the bottom rail of the cot side in towards the centre of the cot (this is easiest using your leg) and lower the cot side, the side will drop to its lowest position (the open position).

To lift the cot side onto the closed position; hold the top rail in the centre and lift-up as far as the side will go then release the side and it will lock into the highest position.

*If you leave the child unattended in the cot, always make sure that the moveable side is closed.*

### **Adjusting the base height:**

The cot has a height adjustable base and can be adjusted to three positions. The cot base can be adjusted by positioning the screws in one of the desired positions and using the Allen key secured with the screws and the barrel fittings. Always use the cot with the base in the lowest position when your child is old enough to sit unaided.

### **To dismantle the cot:**

Remove the drop side by simultaneously pushing in the plastic clips on the bottom cot ends and lifting the cot side (this operation may be easier with two people). The cot side will slide off the fittings. Using the Allen key; remove the screw fittings from the base and remove the base. Remove the screw fittings from the remaining cot side and remove the cot side.

## Maisie Cotbed, Instructions for use continued

### To assemble as a junior bed:

Fix the cot bed base to the junior end (the small cot bed end) using the screws and barrel fittings, fit the other end of the bed base to one of the cot ends, using the lowest position available. Make sure that the bed base is level and that all fittings are secure.

### To dismantle the junior bed:

Remove the screw fittings from the cot base and release the base from the ends.

### SAFETY ADVICE and WARNINGS

- 1) The bottom mattress base position is the safest. You should always use the cot in the lowest position as soon as your baby is old enough to sit up.
- 2) **WARNING:** Do not leave anything in the cot or place the cot close to another product, which could provide a foothold or present a danger of suffocation or strangulation, e.g. strings, blind/curtain cords etc
- 3) **WARNING:** Do not use the cot if any part is broken, torn or missing and use only spare parts approved by the manufacturer.
- 4) If you leave the child unattended in the cot, always make sure that the moveable side is closed.
- 5) When choosing a mattress, ensure that the height between the surface of the mattress to the upper edge of the bed frame is at least 500mm in the lowest position and at least 200mm in the highest position of the bed base.
- 6) There should never be a gap of more than 30mm between the mattress and the sides or the ends of the cot.
- 7) Regularly check that nuts & bolts are secure and always check for evidence of damage, which could make the bed unsafe or cause splinters. Loose fittings can result in snagging clothes or cords posing a risk of strangulation.
- 8) **WARNING:** Do not use more than one mattress in the cot
- 9) Do not use a mattress with a depth greater than 100mm
- 10) We recommend the use of the Babystyle Dream sprung mattress for this cot (nominal size 1400mm x 700mm x 100).
- 11) **WARNING:** Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc, in the vicinity of the cot.
- 12) Clean with a damp cloth. Do not use abrasives or aggressive cleaning products.
- 13) To prevent injury from falls, as soon as the child is able to climb out of this cot, the cot should no longer be used for that child.

**THIS PRODUCT IS GUARANTEED FOR A PERIOD OF 6 MONTHS FROM THE DATE OF PURCHASE AGAINST FAULTY PARTS & WORKMANSHIP. IN THE UNLIKELY EVENT OF THE PRODUCT REQUIRING SERVICE OR REPAIR PLEASE CONTACT THE RETAIL OUTLET FROM WHICH THE PURCHASE WAS ORIGINALLY MADE.**

THIS PRODUCT HAS BEEN DESIGNED AND MANUFACTURED TO MEET BS EN 716-1: 2008

FOR:

Babystyle UK Ltd  
36 Charles Street  
Sileby, Leicestershire, LE12 7RJ

The logo for BabyStyle, featuring the word "Baby" in a bold, sans-serif font and "Style" in a larger, stylized font with a registered trademark symbol.

© Babystyle UK Ltd 1523/111208AJB