


Oyster

Instruction manual

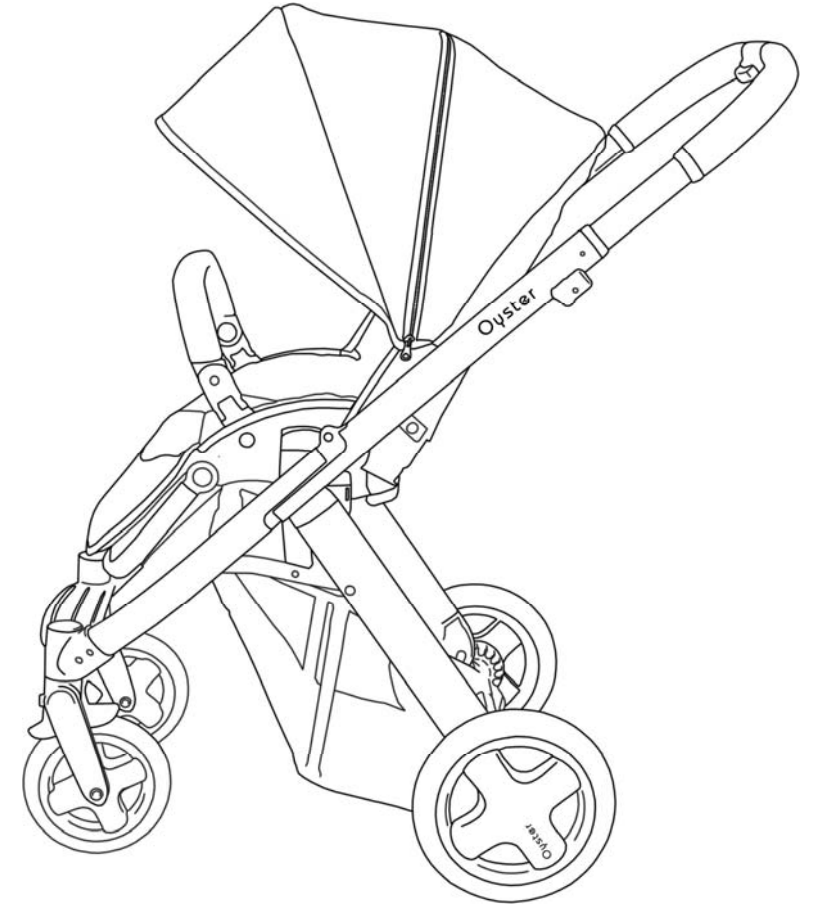

IMPORTANT – KEEP FOR FUTURE REFERENCE

Read the instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.

CONTENTS

	Page
Important Safety Information	3
Primary features	4
Fitting and removing the front wheels	4
Fitting and removing the rear wheels	5
Operating the swivel front wheels	5
Adjusting the handle height	5
Using the parking brake	5
Opening the chassis	6
Fitting the seat unit	6
Removing the seat unit	6
Folding the chassis	6
Folding the chassis with the seat unit fitted	7
Adjusting the seat unit backrest	7
Fitting the carrycot to the chassis	8
Removing the carrycot from the chassis	8
Lowering the carrycot hood	8
Fitting and removing the bumper bar	8
Fitting the Oyster car seat to the chassis	9
Removing the Oyster car seat from the chassis	9
Car seat adaptors	9
Car seat options	10
Fitting removing alternative car seats to the Oyster chassis	10/11
Using the safety harness	11/12
Hood/Sun canopy/Insect/UV Net	12
Removing/Fitting the hood	12
Flip out canopy	12
Zippered canopy extension	12
Insect net	13
Fitting the seat unit apron	13
Fitting the footmuff	13
Fitting the stroller rain cover	14
Fitting the carrycot rain cover	14
Care and Maintenance	14/15
Warranty	15

- Do not place items on the hood/canopy, it may damage the vehicle and/or render it unsafe.
- Rubber tyres can leave marks on some surfaces. The tyres can react with some surfaces (vinyl floor coverings, carpets etc.) and cause stains. Always stand the stroller on a protective surface indoors.
- Routinely clean the metal parts with a damp cloth & then dry immediately
- Fabrics should be cleaned following the guidance on the care labels.
- Do not wash in the washing machine. Sponge clean or hand wash with mild detergent and warm water (30°C)

WARRANTY

Babystyle UK Ltd provides a warranty in support of the retailer from whom you purchased this product. The warranty is effective for 6 months from the date of purchase for the original purchaser/owner. Proof of purchase will (at the discretion of Babystyle UK Ltd) be required in order for your retailer to claim on the warranty. The warranty excludes any fault caused by misuse, damage or neglect. It is the user's responsibility to undertake routine inspection and maintenance of the vehicle in order to avoid damage to the vehicle and/or injury to the child. The vehicle is returned to the retailer at the owners' expense in order to ascertain if a claim under the warranty is justified. Please carefully read the instructions on how to look after your stroller. This does not affect your statutory rights.

The logo for BabyStyle, featuring the word "Baby" in a bold, sans-serif font and "Style" in a larger, stylized script font with a registered trademark symbol.

Babystyle UK Limited
LE12 7RJ
UNITED KINGDOM

www.oysterstroller.com

This instruction manual © Babystyle UK Limited 2009
All rights reserved. OYSTER AJB1700/071209

FITTING THE STROLLER RAIN COVER

Place the rain cover over the stroller; the rain cover needs the stroller hood to be fitted to support the rain cover. Fasten the Velcro strips at the front of the rain cover around the front legs of the stroller (when the seat unit is facing forwards). When the seat unit is facing rearwards, fasten the Velcro strips at the front of the rain cover around the rear legs to secure. Fasten the strap at the back of the seat unit by joining the press-studs.

FITTING THE CARRY COT RAIN COVER

With the carrycot hood in the upright position place the rain cover over the hood so that the flap on the rain cover corresponds with the opening in the carry cot hood. Pull the rain cover down to the rear of the hood so that the elasticated edge covers the rear of the carrycot. Ease the front part of the rain cover over the apron and down and around the front and sides of the carrycot.


CARE AND MAINTENANCE

- Regularly check screws, rivets, bolts & fastenings to ensure they are locked tight and secure. Replace any parts in an inferior condition. Should you intend to use the pushchair during the winter, by the sea or off-road; it is important to clean thoroughly & dry the vehicle after use. Salt from the ocean or from roads will corrode metal parts unless removed. After use in these circumstances clean with fresh water and thoroughly dry after use.
- Check on a regular basis that all chassis locking devices are working correctly.
- If any part of the pushchair is damaged contact your local Babystyle retailer immediately without using the pushchair.
- Do not expose your pushchair to excessive sunlight for extensive periods of time, even normal exposure to sunlight may cause the colour of the fabric to change.
- Take care not to tear the fabrics while transporting the pushchair.
- Light oil or silicone spray is suitable to use as a lubricant for moving parts. Petroleum jelly is a good lubricant to use on the front axle stubs. Periodically remove the front swivel wheel units clean and lubricate with petroleum jelly.
- Ensure that zips are either fully open or fully closed or they may be damaged.
- Always use the rain cover in inclement weather.

IMPORTANT SAFETY INFORMATION

1. **WARNING:** A child's safety is your responsibility
2. **WARNING** It may be dangerous to leave your child unattended.
3. **WARNING** Ensure that all locking devices are engaged before use.
4. **WARNING** Do not use a mattress thicker than 35mm
5. This vehicle is intended for children from birth (0+months) up to 15kg
6. It is important that any person intending to use this vehicle fully understands the instructions.
7. **WARNING** Use a harness as soon as your child can sit unaided.
8. **WARNING** This seat unit is not suitable for children under 6 months.
9. **Never** overload the vehicle; the weight limit for the shopping tray is **3 kg**. Always place articles in the centre of the tray provided.
10. This vehicle has been designed for one child, do not attempt to carry more than one child in this vehicle
11. **WARNING:** Incorrect assembly, folding or use of this vehicle may cause damage and affect the safety of the vehicle.
12. Do not use accessories that are not approved by the manufacturer
13. **WARNING** Any load attached to the handle affects the stability of the pram/pushchair.
14. **WARNING** Always use the crotch strap in combination with the waist belt.
15. **WARNING:** Never leave the vehicle without first engaging the parking device. Avoid uphill or downhill parking.
16. **WARNING** Check that the pram body or seat unit attachment devices are correctly engaged before use.
17. Avoid using the vehicle on steps, stairs or escalators as it may be dangerous to your child/children.
18. **WARNING** This product is not suitable for running or skating
19. Check on a regular basis to make sure that all essential components & locking devices are functioning correctly.
20. Do not use replacement parts other than those supplied by the manufacturer or distributor

PRIMARY FEATURES

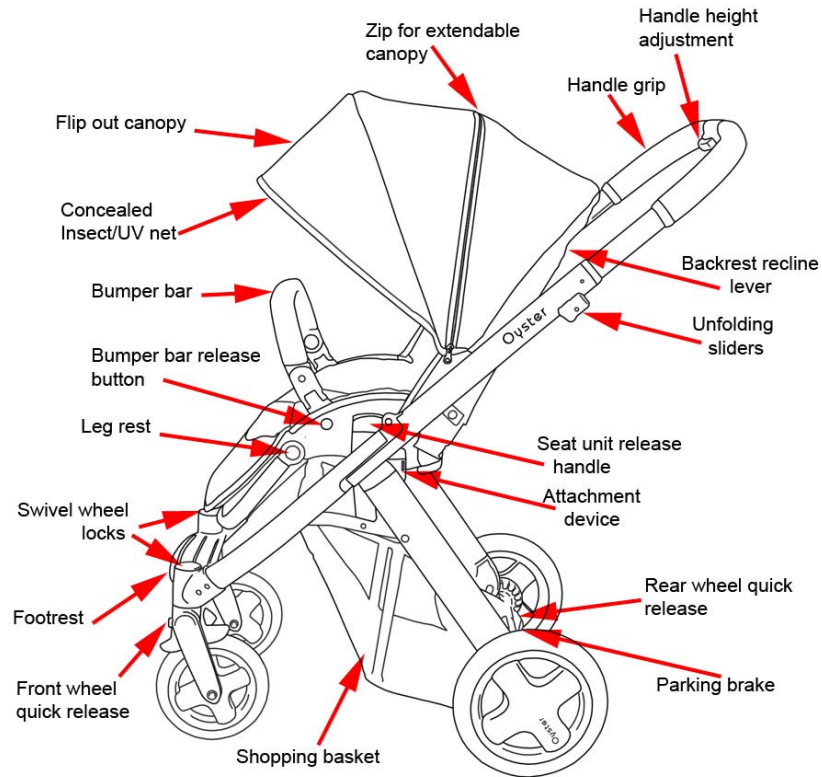

FITTING AND REMOVING THE FRONT WHEELS

Push in the front wheel quick release button on the front wheel housing and push the wheel unit onto the front wheel axle stub until it stops. Release the quick release button and check that the wheel is locked on. To remove the wheel; push in the front wheel quick release button on the front wheel housing and pull the wheel unit from the axle stub. **NOTE, the axle stubs can become greasy and may leave marks on other surfaces they come into contact with. To prevent marking clean the axle stubs with a cloth.**

To keep the front wheels swivelling freely ensure they are regularly lubricated, if steering becomes stiff, remove front wheel units, clean, lubricate and refit.

FLIP OUT CANOPY

The front section of the hood can be flipped out or folded back into the main part of the hood depending on choice. To flip out the canopy hold the front part of the canopy and pull forwards. To fold the canopy away push it back into the hood and smooth the fabric.

ZIPPERED CANOPY EXTENSION

To maximise the hood coverage there is a zippered section in the middle of the hood. Unfasten the zip and extend the hood. Fasten the zip to reduce the hood coverage.

INSECT/UV NET

Concealed by a zip in the front flip-out part of the canopy is an insect net. Unfasten the zip and unfurl the insect net. The elasticated part of the insect net attaches around the leg rest and there are two Velcro tabs on the side of the net which fasten to the sides of the hood. To stow the insect net; roll neatly and place in the zippered opening before closing the zip, being careful not to catch the net in the zip.

FITTING THE SEAT UNIT APRON

Place the bottom part of the apron over the leg rest. The press-studs at the side of the apron allow the apron to be fastened around the bumper bar. Pass the top of the apron under the bumper bar and fasten the press-studs at the top of the apron to the corresponding press-studs on the side of the seat backrest. To remove the apron, release the press-studs and take away.

FITTING THE FOOTMUFF

The footmuff top cover can be removed by unfastening the zip. The back part of the footmuff can be used as a seat liner without the top part.

To attach the footmuff to the seat unit: Release the harness clips from the centre buckle and release the shoulder straps from the waist belts at the buckle connection. Pass the shoulder straps and waist belts through the corresponding openings in the footmuff. Pass the crotch strap through the opening in the footmuff. Attach the two press-studs at the rear top of the seat backrest to the two press-studs on the top of the footmuff.

shoulder straps should be clipped into the centre buckle at the end of the crotch strap. The harness can be adjusted to suit your child by sliding the adjusters along the shoulder straps and waist belts. To release the safety harness, push the buttons on the centre buckle. D-rings for attaching a separate harness can be found attached to the integral harness at the base of the waist straps. The crotch strap can be adjusted to suit your child. There are two button holes in the seat base. Thread the buckle through the hole in the plastic seat base and then through the opening in seat covers and reposition, passing back through first the seat cover and then through the opening in plastic seat base. The shoulder straps can be adjusted to two positions, thread the buckle through the hole in the plastic seat back and through the opening in the seat cover and reposition passing first through the seat cover and then through the opening in the plastic seat back. Ensure that both shoulder straps are at the same level and that both are secure.

WARNING Always use the crotch strap in combination with the waist belt.

ALWAYS USE THE SAFETY HARNESS

HOOD/SUN CANOPY/INSECT NET

The Oyster has a multi function hood that helps to protect your child from the elements. The hood has four sections and a concealed insect net. The hood can also be removed altogether.

TO REMOVE/ FIT THE HOOD

Release the two press-studs at the back of the hood where the hood attaches to the backrest. Release the Velcro fastening just above the two press-studs. Fold the hood back; hold the hood by the frame in the centre and pull the hood up in line with the back rest, the hood will slide away from the fittings on the side of the seat back rest. To fit the hood. Line up the plastic components on the hood sides (one left, one right) and slide them into the corresponding plastic parts on the sides of the seat back rest. Push them down until they click into position. Fasten the Velcro on the hood to the seat back and secure the press-studs

FITTING AND REMOVING THE REAR WHEELS

Hold the rear wheel and insert the rear wheel axle stub into the hole in the rear axle. Push in completely until you hear a click. Pull the wheel to check it is locked on. To remove the rear wheel push in and hold the rear wheel quick release lever (on the rear axle) and pull the rear wheel from the axle. **NOTE, the axle stubs can become greasy and may leave marks on other surfaces they come into contact with. To prevent marking clean the axle stubs with a cloth.**

OPERATING THE SWIVEL FRONT WHEELS

The front wheels can be used in swivel-wheel or fixed-wheel mode. To switch from locked to swivel; press down the swivel wheel lock buttons (left & right), to switch back to locked; press again and the wheels will lock automatically when they return to the travel forwards position.


ADJUSTING THE HANDLE HEIGHT

The handle height is adjustable to four positions. To adjust the handle height, press-in and hold in the button in the middle of the handle grip, slide the handle up or down to one of the four positions. The handle will click into one of the pre-set positions when the button is released.

USING THE PARKING BRAKE

To engage the brake, firmly press down with your foot the brake lever found in the middle of the rear axle. Check that the brake is fully engaged before letting go of the handle. To release the brake, with your foot press forwards or lift up the brake lever until the wheels move freely.

NEVER Leave the vehicle without first engaging the brake.

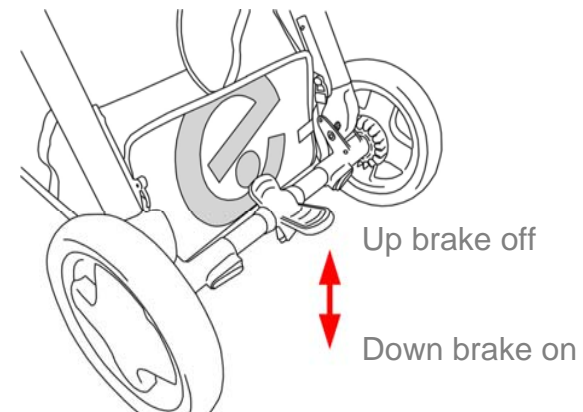

OPENING THE CHASSIS

Release the chassis locking clip by pushing it outwards and pull up on the handle. The chassis will start to open and will click when the handle tube is locked in line with the lower tube.

FITTING THE SEAT UNIT

To fit the seat unit to the chassis: hold the seat unit by the seat unit release handles and lower the seat unit into the attachment devices left & right. Push down until the seat clicks and locks into position. Ensure the seat is locked into position by trying to pull the seat from the chassis.

The seat can be fitted facing forwards or facing backwards.


REMOVING THE SEAT UNIT

Hold the seat unit by the seat sides and the seat unit release handles (left & right) and pull the handles up with your fingers. The seat will be released from the attachment device.

NEVER attempt to fit or remove the seat unit while the seat unit is occupied.

FOLDING THE CHASSIS

Standing in the pushing position hold both unfolding sliders one right, one left); with your right-hand thumb push down the button and hold, with your index fingers slide up the unfolding sliders and lift the whole handle. The right hand slider will not slide unless the button is pressed and held in.

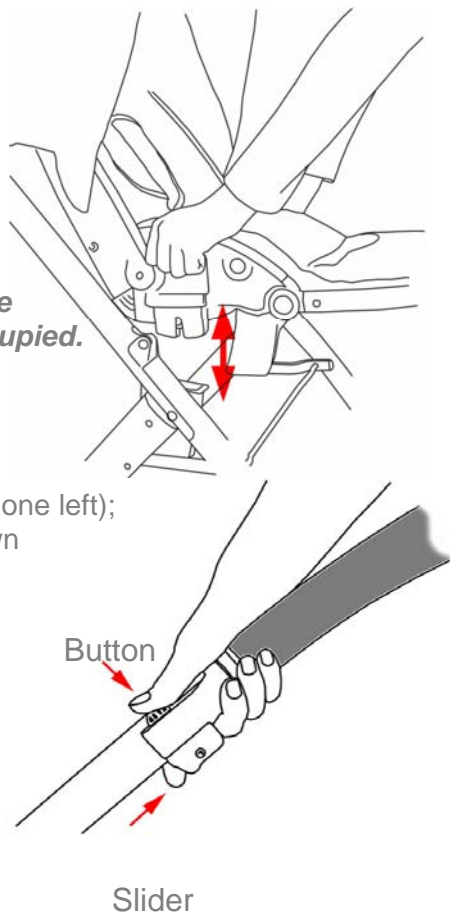


Always ensure the child is clear of moving parts while making adjustments

clicks and locks into position. Check that the car seat is secure and locked by pulling up on the car seat handle.

REMOVING THE Britax Baby-Safe SHR CAR SEAT FROM THE OYSTER CHASSIS.

Hold the carry handle of the car seat and press the large side button in with your fingers. While holding in the side button press down with your thumb on the top button, and lift the car seat away from the chassis.

OYSTER HARNESS

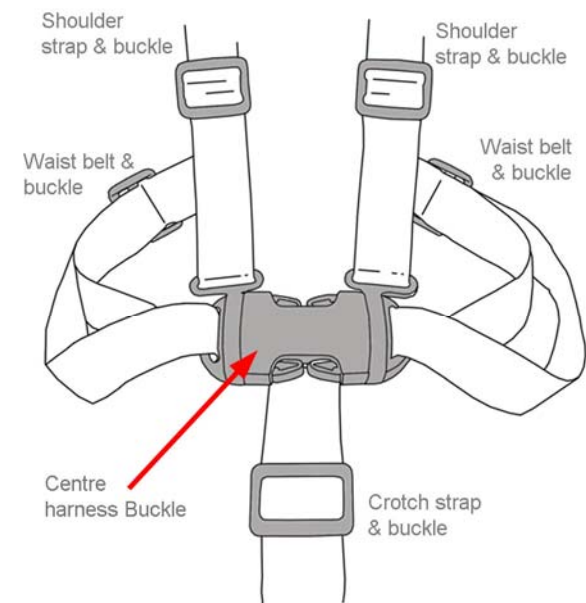

USING THE SAFETY HARNESS

Always apply the parking brake before placing your child in the vehicle. The safety harness has two shoulder straps, two waist belts and a crotch strap. Place the two shoulder straps over the child's shoulders and the waist belts around the child's waist. The crotch strap should be placed between the child's legs. The waist belts &

CAR SEAT OPTIONS

The Oyster can be fitted with several car seats. Always check with your retailer that you have the correct car seat adaptors (if required).

OYSTER car seat, requires LB321 adaptors

MAXI-COSI CabrioFix requires Oyster Maxi-Cosi car seat adaptors

BRITAX Baby-Safe SHR does not require adaptors

FITTING THE Maxi- Cosi CabrioFix CAR SEAT TO THE OYSTER CHASSIS

The car seat can not be attached to the chassis until the seat unit or the carrycot has been removed.

Insert the car seat adaptors into the Oyster chassis attachment device, the adaptors are marked "1" and "2", 1 is right and 2 is left. Push down on the adaptors until they click and lock into position. Hold the car seat by the carry handle and lower the car seat onto the car seat adaptors, the adaptors should slot into the cavity at the base of the car seat handle left and right. Push the car seat down firmly until the car seat clicks and locks into position. Check that the car seat is secure and locked by pulling up on the car seat handle.

REMOVING THE Maxi- Cosi CabrioFix CAR SEAT FROM THE OYSTER CHASSIS

To remove the car seat from the chassis: Press down on the two buttons on the sides of the car seat (not the handle adjustment buttons where the handle turns) and lift the car seat away from the chassis.

To remove the adaptors from the OYSTER chassis pull up on the recessed handles and lift the adaptors away from the attachment device.

FITTING THE Britax Baby-Safe SHR TO THE OYSTER CHASSIS

The car seat can not be attached to the chassis until the seat unit or the carrycot has been removed. The Britax Baby Safe SHR does not require adaptors to fit onto the OYSTER chassis. Hold the car seat by the carry handle and lower the car seat onto the chassis so that the fittings below the car seat handle slide into the attachment device on the OYSTER chassis. Push the car seat down firmly until the car seat

FOLDING THE CHASSIS WITH THE SEAT UNIT FITTED


The Oyster can be folded with the seat unit fitted facing either forwards or backwards.

To fold the chassis with the seat unit facing forwards: Remove the bumper bar. Pull the backrest seat recline lever and fold the backrest forward so that it lies completely flat on the seat base. If the seat back rest stops before it is completely flat, lift the backrest seat recline lever a little more, and lower the seat back rest. The chassis can now be folded with as described above in "FOLDING THE CHASSIS"

To fold the chassis with the seat unit facing backwards: Remove the bumper bar. Pull the backrest seat recline lever and fold the backrest so that it lies completely flat on the seat base. If the seat back rest stops before it is completely flat, lift the backrest seat recline lever a little more, and lower the seat back rest. The chassis can now be folded with as described above in "FOLDING THE CHASSIS"
The most compact fold is with the seat unit removed.

ADJUSTING THE SEAT UNIT BACKREST

To recline the seat unit: With your fingers hold the lever at the top back of the seat unit and lift the lever. While holding the lever, reposition the backrest to the required position. The seat backrest has three positions; upright, intermediate and reclined. When the seat backrest is in the required position, release the lever and the seat will lock into position.

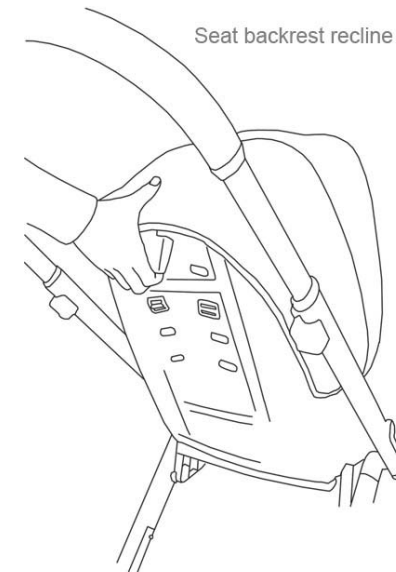

FITTING AND REMOVING THE BUMPER BAR

Push the ends of the bumper bar into the corresponding slots on the seat unit until the bumper bar locks into position. To remove the bumper bar, press in the bumper bar release button on the side of the seat; one on the right side one on the left side. The position of the bumper bar can be adjusted by pressing the buttons on the insides of the bumper bar.


FITTING THE CARRYCOT TO THE CHASSIS

The Carrycot can only be fitted to the chassis when the seat unit or car seat has been removed. The carry cot can only be fitted to the chassis facing the handle. Lower the carry cot so that the fittings in the middle of the carrycot line up with the attachment device. Push the carrycot down until it clicks into position. Check that the carrycot is securely attached by trying to lift the carrycot from the chassis.

REMOVING THE CARRYCOT FROM THE CHASSIS

To remove the carrycot from the chassis:
Hold the carry cot by the two release Handles, and pull the handles up with your fingers. The carrycot will be released from the attachment device.

Children should be clear of moving parts while making adjustments.

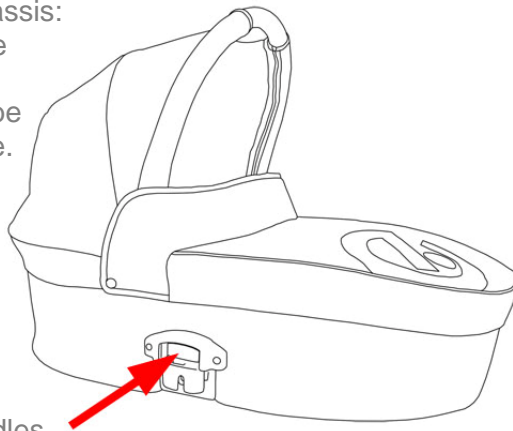

Carrycot release handles

LOWERING THE CARRYCOT HOOD

The carrycot hood can be lowered (reclined backwards) by pressing in the two buttons (left & right) at the outside base of the hood opening. Push in the buttons and recline the hood. To erect the hood; lift up the hood until it clicks into position.

FITTING THE OYSTER CAR SEAT (model LB321) TO THE CHASSIS


Matching Oyster car seat is fitted to the chassis by using the LB321 Oyster car seat adaptors. The car seat can not be attached to the chassis until the seat unit or the carrycot has been removed. Insert the car seat adaptors into the Oyster chassis attachment device, the adaptors are marked "R" and "L" for right and left. Push down on the adaptors until they click and lock into position. Hold the car seat by the carry handle and lower the car seat onto the car seat adaptors. The adaptors should slot into the cavity at the base of the car seat handle left and right. Push the car seat down firmly until the car seat clicks and locks into position. Check that the car seat is secure and locked by pulling up on the car seat handle.

REMOVING THE OYSTER CAR SEAT (model LB321) FROM THE CHASSIS

To remove the car seat from the chassis; press down on the two red buttons on the sides of the car seat (not the handle adjustment buttons where the handle turns) and lift the car seat away from the chassis.

To remove the adaptors on the Oyster chassis pull up on the recessed handles and lift the adaptors away from the attachment device.

CAR SEAT ADAPTORS

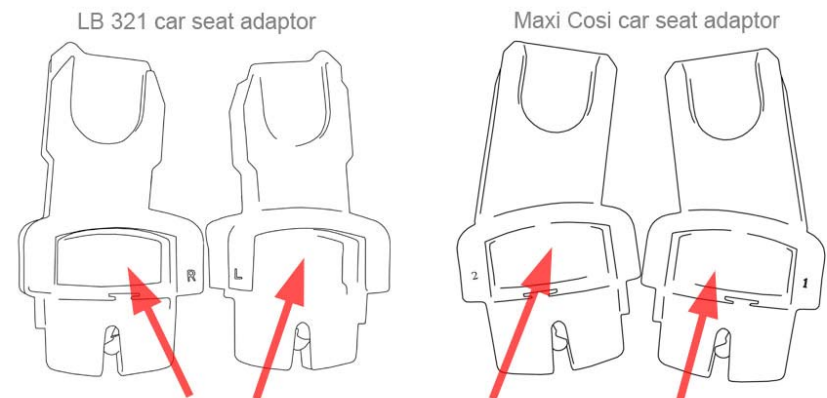

Recessed handles for removing car seat adaptors from chassis